
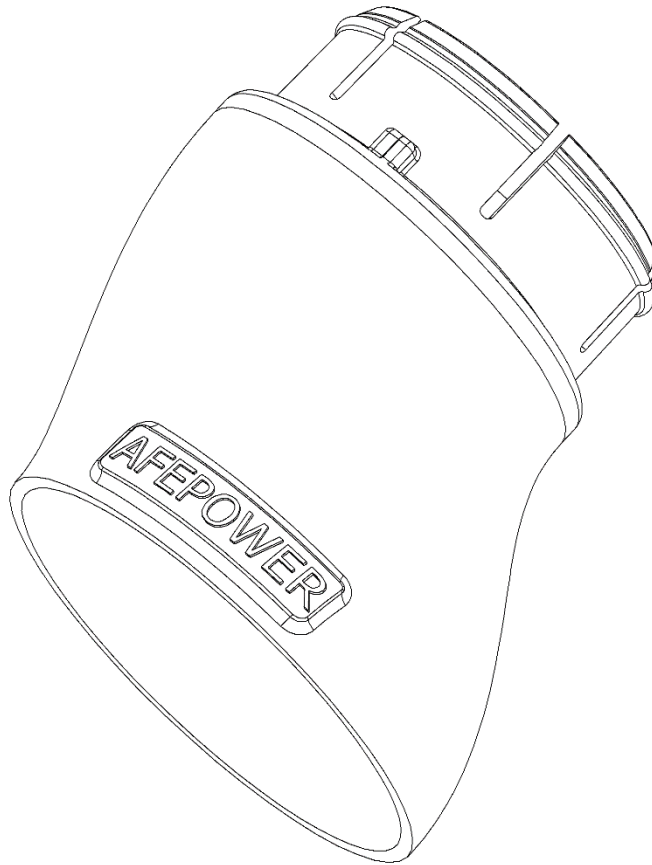


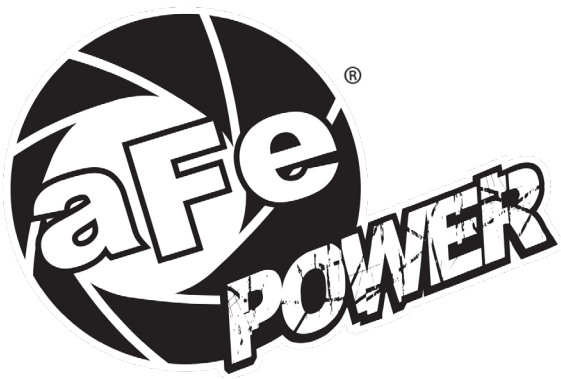

advanced FLOW engineering Dynamic Air Scoops

Instruction Manual P/N: 50-70009S

Make: **Dodge**

Model: **Challenger R/T Scat Pack**

Year: **19-22**


Engine: **V8-6.4L**



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Air Inlet Duct	05-5070009B1

Emission Disclaimer: This product is not currently CARB exempt and is not available for purchase in California for use on any vehicle registered with the California Department of Motor Vehicles.

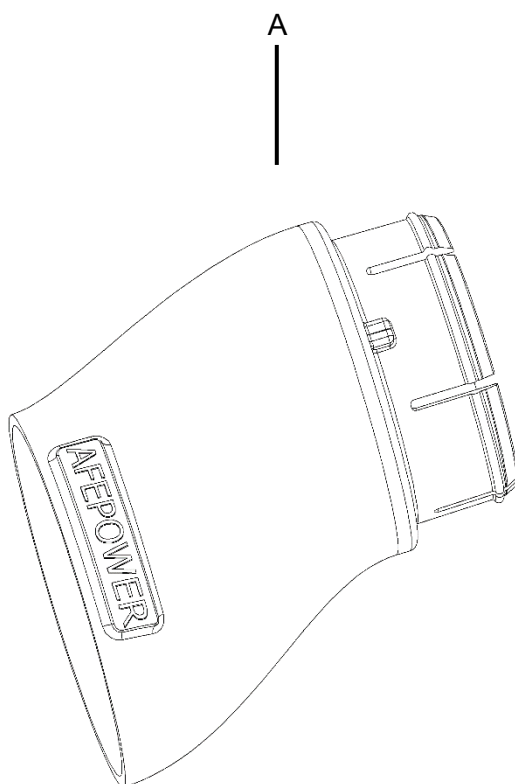

**Figure A**

Refer to Figure A for Steps 1-2

Step 1: Remove the intake housing of vehicle to access the backside of the headlight.

Step 2: Slide your hand through the back side of the headlight and push the cap off on the center of the headlight.



Figure B

Refer to Figure B for Step 3

Step 3: Connect the inlet scoop to the aFe POWER housing.



Figure C

Refer to Figure C for Step 4-5


Step 4: Re-install housing into the vehicle and make sure the inlet scoop connects to the headlight hole.

Step 5: Install the other components for the intake per the intake system instruction sheet.

Your installation is now complete.



Page left blank intentionally.

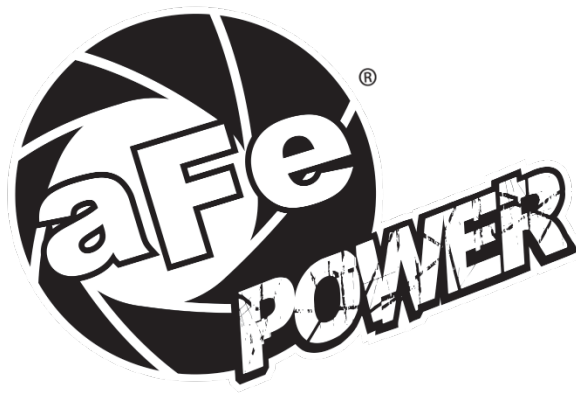

advanced FLOW engineering, inc.

252 Granite Street Corona, CA 92879

<https://afepower.com/contact>